

Kochtopf ohne Deckel

Edelstahl 18/10

Casseruole senza coperchio / Cooking-pots without lid



H-1417

Milchtopf

Milk-pot

Bollilatte

Ø 14 cm

h. mm. 110 - ltr. 1,7



H-1612S

Stielkochtopf

Cooking-pot 1 long handle

Casseruola bassa 1 manico

Ø 16 cm

h. mm. 60 - ltr. 1,2



H-1612

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 16 cm

h. mm. 60 - ltr. 1,2



H-1618

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola alta 2 maniglie

Ø 16 cm

h. mm. 90 - ltr. 1,8



H-1622

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 16 cm

h. mm. 110 - ltr. 2,2



H-2015S

Stielkochtopf

Cooking-pot 1 long handle

Casseruola bassa 1 manico

Ø 20 cm

h. mm. 50 - ltr. 1,5

Kochtopf ohne Deckel

Edelstahl 18/10

Casseruole senza coperchio / Cooking-pots without lid



H-2015

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 20 cm

h. mm. 50 - ltr. 1,5

H-2025

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola media 2 maniglie

Ø 20 cm

h. mm. 80 - ltr. 2,5



H-2031

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola alta 2 maniglie

Ø 20 cm

h. mm. 100 - ltr. 3,1

H-2037

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola molto alta 2 maniglie

Ø 20 cm

h. mm. 120 - ltr. 3,7



H-2047

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 16 cm

h. mm. 150 - ltr. 4,7

H-2056

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola alta 2 maniglie

Ø 20 cm

h. mm. 180 - ltr. 5,6

Kochtopf ohne Deckel

Edelstahl 18/10

Casseruole senza coperchio / Cooking-pots without lid



H-2427

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 24 cm

h. mm. 60 - ltr. 2,7

H-2440

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola media 2 maniglie

Ø 24 cm

h. mm. 90 - ltr. 4



H-2457

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola alta 2 maniglie

Ø 24 cm

h. mm. 125 - ltr. 5,7

H-2467

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola molto alta 2 maniglie

Ø 24 cm

h. mm. 150 - ltr. 6,7



H-2481

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 24 cm

h. mm. 180 - ltr. 8,1

H-2490

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola alta 2 maniglie

Ø 24 cm

h. mm. 195 - ltr. 9

Kochtopf ohne Deckel

Edelstahl 18/10

Casseruole senza coperchio / Cooking-pots without lid



H-2634

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 26 cm

h. mm. 60 - ltr. 3,4



H-2653

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola media 2 maniglie

Ø 26 cm

h. mm. 100 - ltr. 5,3



H-2674

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseroula alta 2 maniglie

Ø 26 cm

h. mm. 140 - ltr. 7,4



H-2696

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 26 cm

h. mm. 180 - ltr. 9,6



H-2837

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 28 cm

h. mm. 60 - ltr. 3,7



H-2849

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola media 2 maniglie

Ø 28 cm

h. mm. 80 - ltr. 4,9

Kochtopf ohne Deckel

Edelstahl 18/10

Casseruole senza coperchio / Cooking-pots without lid



H-2868

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola alta 2 maniglie

Ø 28 cm

h. mm. 110 - ltr. 6,8



H-2892

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 28 cm

h. mm. 150 - ltr. 9,2



H-28123

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola alta 2 maniglie

Ø 28 cm

h. mm. 200 - ltr. 12,3



H-3057

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseruola bassa 2 maniglie

Ø 30 cm

h. mm. 80 - ltr. 5,7



H-3085

Kochtopf 2 Griffe

Cooking-pot 2 handles

Casseroula 2 maniglie

Ø 30 cm

h. mm. 120 - ltr. 5,8



H-30141

Kochtopf 2 Griffe

Cooking-pot 2 handles

Pentola 2 maniglie

Ø 30 cm

h. mm. 200 - ltr. 14,9

Pfannen ohne Deckel

Edelstahl 18/10

Bistecchiere senza coperchio / Frypans without lid



H-P-2013

Bratpfanne 2 Griffe
Fry-pan 2 handles
Tegame 2 maniglie
Ø 20 cm
h. mm. 40 - ltr. 1,3

H-P-2013S

Stielbratpfanne
Fry-pan 1 long handle
Padella
Ø 20 cm
h. mm. 40 - ltr. 1,3



H-P-2418

Bratpfanne 2 Griffe
Fry-pan 2 handles
Tegame 2 maniglie
Ø 24 cm
h. mm. 40 - ltr. 1,8

H-P-2418S

Stielbratpfanne
Fry-pan 1 long handle
Padella
Ø 24 cm
h. mm. 40 - ltr. 1,8



H-P-2621

Bratpfanne 2 Griffe
Fry-pan 2 handles
Tegame 2 maniglie
Ø 26 cm
h. mm. 40 - ltr. 2,1

H-P-2825

Bratpfanne 2 Griffe
Fry-pan 2 handles
Tegame 2 maniglie
Ø 28 cm
h. mm. 40 - ltr. 2,5

Pfannen ohne Deckel

Edelstahl 18/10

Bistecchiere senza coperchio / Frypans without lid



H-P-3028

Bratpfanne 2 Griffe

Fry-pan 2 handles

Tegame 2 maniglie

Ø 30 cm

h. mm. 40 - ltr. 2,8



H-GR-2825

Grillpfanne 2 Griffe

Tracked-inside fry-pan 2 handles

Bistecchiera interno rigato 2 maniglie

28 cm

h. mm. 40 - ltr. 2,5

H-GR-3028

Grillpfanne 2 Griffe

Tracked-inside fry-pan 2 handles

Bistecchiera interno rigato 2 maniglie

30 cm

h. mm. 40 - ltr. 2,8



PFANNEN-SET Ø 20-24-28 cm,

FRY-PAN SET Ø 20-24-28 cm,

TRIS DI PADELLE Ø 20-24-28 cm

Zubehör
Accessori / Fittings

Edelstahl 18/10



H-SI-20
Siebgareinheit
Steamer
Cuociverdure - Colapasta
Ø 20 cm




H-SI-24
Siebgareinheit
Multi-Steamer
Cuociverdure - Colapasta
Ø 20/24 cm



H-CO-20
Mehrzweckschüssel + Plastikdeckel
Multiusage bowl + plastic lid
Bacinella + coperchio plastica
Ø 20 cm



H-CO-24
Mehrzweckschüssel + Plastikdeckel
Multiusage bowl + plastic lid
Bacinella + coperchio plastica
Ø 24 cm

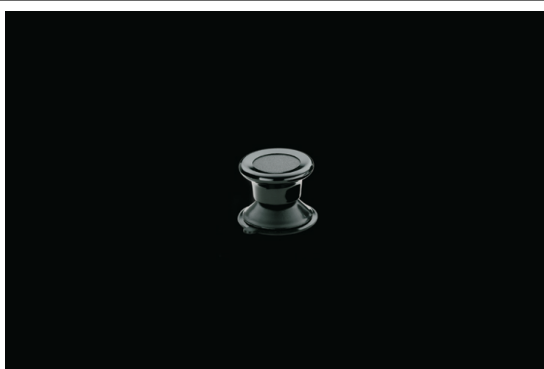

H-S-1
Saugknopf
Suction-knob
Ventosa

Deckel
Coperchio / Lids

Edelstahl 18/10



H-D-T-14,16,20,24,26,28,30
Deckel flach mit Thermostat
Shallow lid with thermometer
Coperchio piano con termometro

H-D-14T Ø 14 cm, H-D-16T Ø 16 cm,
H-D-20T Ø 20 cm, H-D-24T Ø 24 cm,
H-D-26T Ø 26 cm, H-D-28T Ø 28 cm,
H-D-30T Ø 30 cm

H-HD-T
Haubendeckel mit Thermostat
Dome lid with thermometer
Coperchio Duomo con termometro Ø 20/24 cm

H-HD-28T Ø 28 cm
H-HD-30T Ø 30 cm



Schnellkochdeckel Ø 24cm - Pressure cooker lid Ø 24cm - coperchio di pressione Ø 24cm

